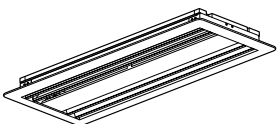
 


Suction Grille Installation Manual(for Built-in duct)


1. Check the parts.

- This manual and the parts listed below are included in the box.

Name	Specification	EA	Name	Specification	EA
Suction Panel (with air filter)		1	Suction Panel Fix bolt	 M5 x 18	4


2. Preparation to attach the suction grille

- As shown below, pull the central suction inlet to the side by pressing in the arrow direction to separate it to the bottom direction.
- Remove the filter from the left and right side of the filter fixation part.

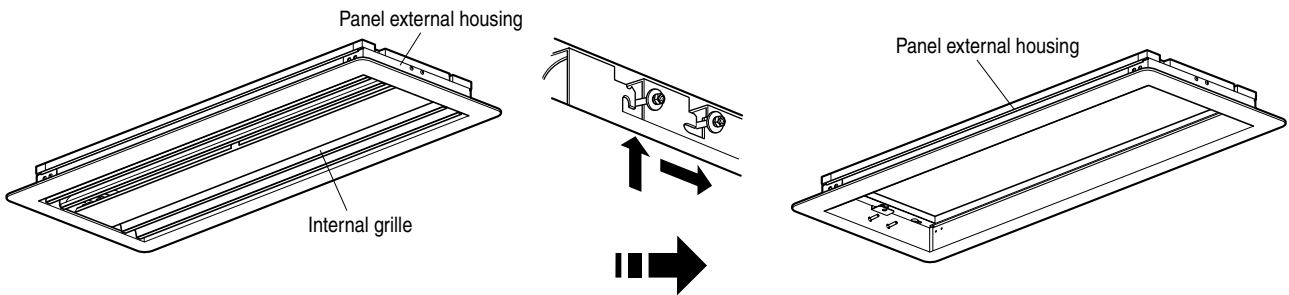


3. How to attach the suction grille


1) When using the suction canvas

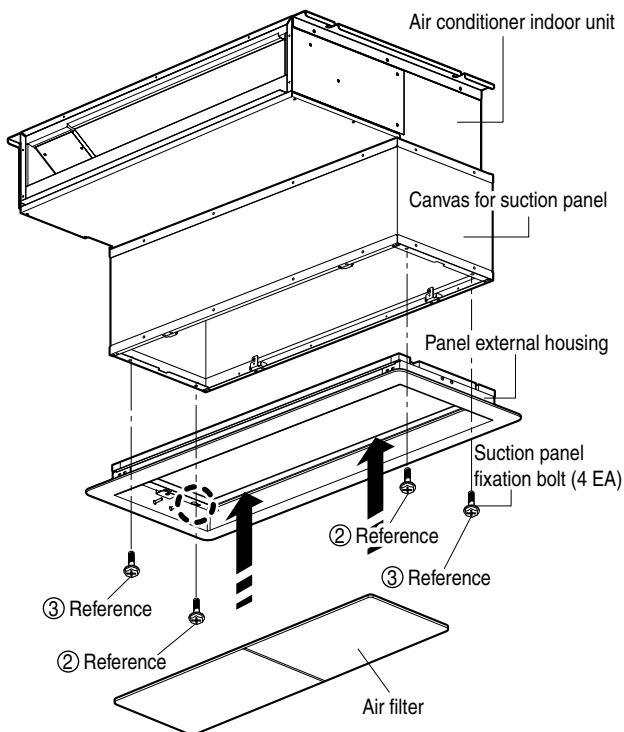

- ① Attach the canvas for suction panel on the air conditioner indoor unit. (Refer to the canvas installation manual on details of how to attach the canvas.)
- ② First install 2 fixation bolts for suction panel on the suction canvas.
- ③ Move the panel external housing in the same direction shown below to the 2 bolts and hook them tightly.

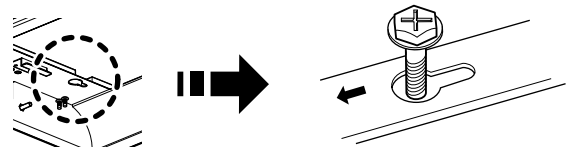


- ④ Connect the 2 remaining bolts and tighten the bolts so that the gap between bolt and the suction canvas is about 3~5mm.

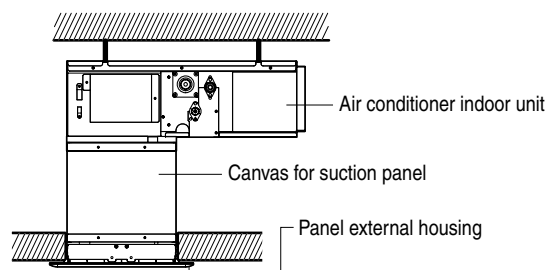


- ⑤ Fit in the air filter to the left and right filter fixation part.


2) When attaching directly on the product

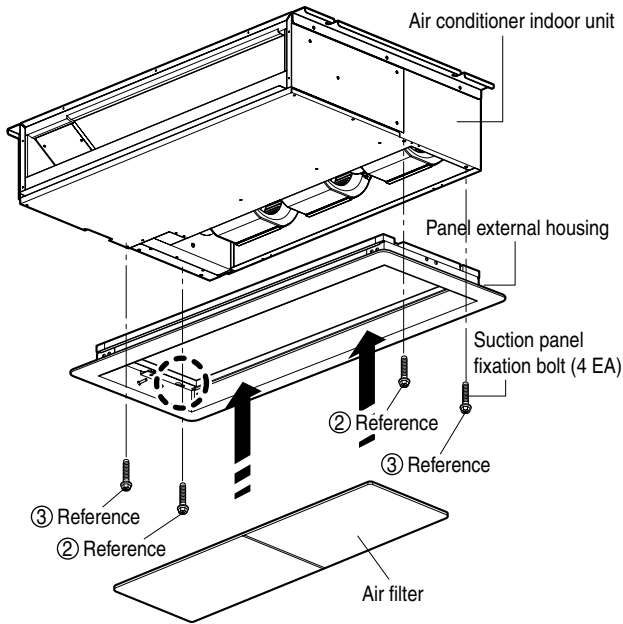

- ① First tighten 2 fixation bolts for suction panel on the main unit of the air conditioner about 1/3.
- ② Move the panel external housing in the same direction shown below to the 2 bolts and hook them tightly.

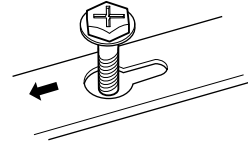

- ③ Connect the 2 remaining bolts and tighten the bolts so that the gap between bolt and the suction canvas is about 3~5mm.

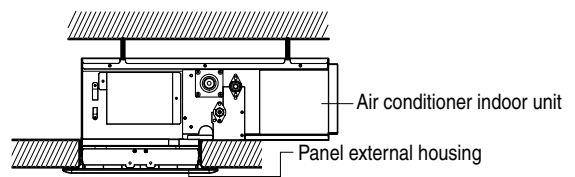


- ④ If there is a gap with the ceiling, adjust the height of the main unit of the air conditioner.
- ⑤ Fit in the air filter to the left and right filter fixation part.

4. Attaching the suction grille to the internal grille

- When fixing the internal grille to the external grille, arrange the fixing chain not to appear by grille gap.
- Attach the internal grill to the panel external housing in the reverse order of internal grille disassembly in 2.

1) When using the suction canvas

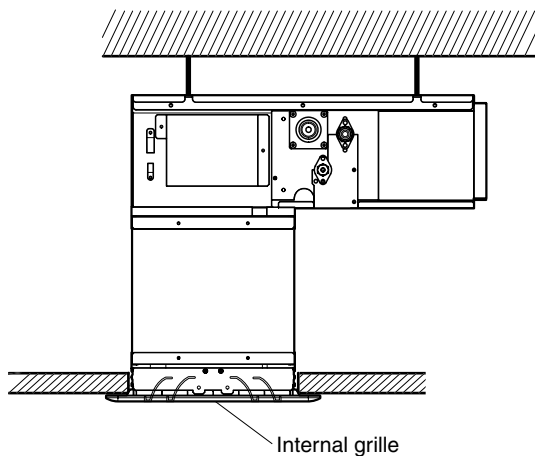

2) When attaching directly on the product

