



Internal Use Only

<http://biz.lgservice.com>

AHU COMMUNICATION KIT


SVC MANUAL(Exploded View)

MODEL : PRCKAM


CAUTION

Before Servicing the unit, read the safety precautions in General SVC manual.
Only for authorized service personnel.

1. Wiring Diagrams


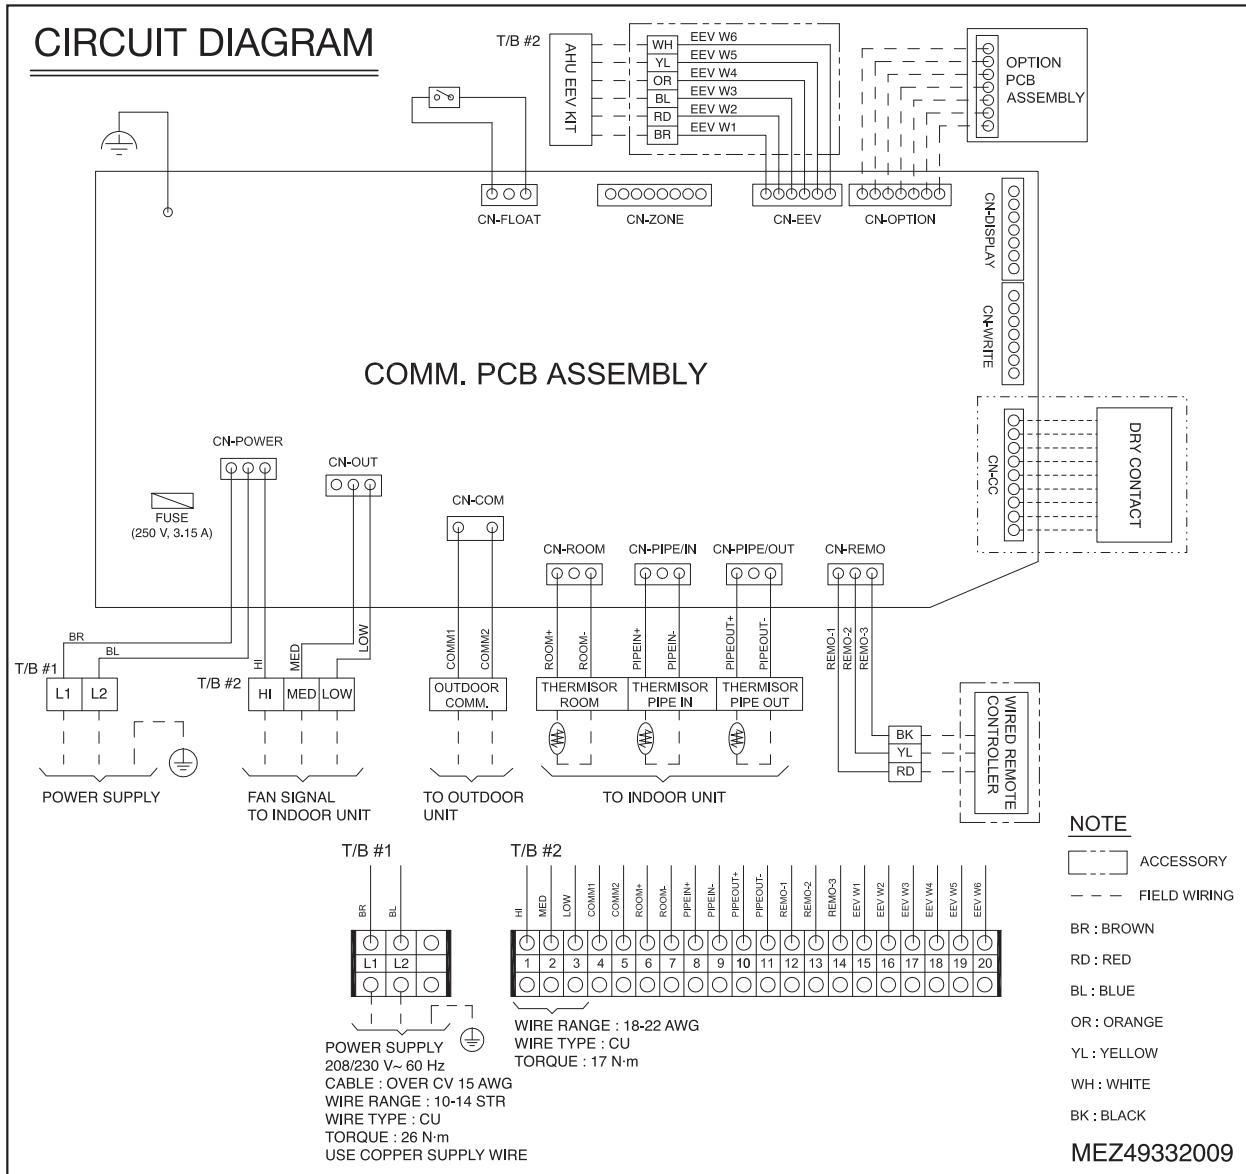


■ Main PCB

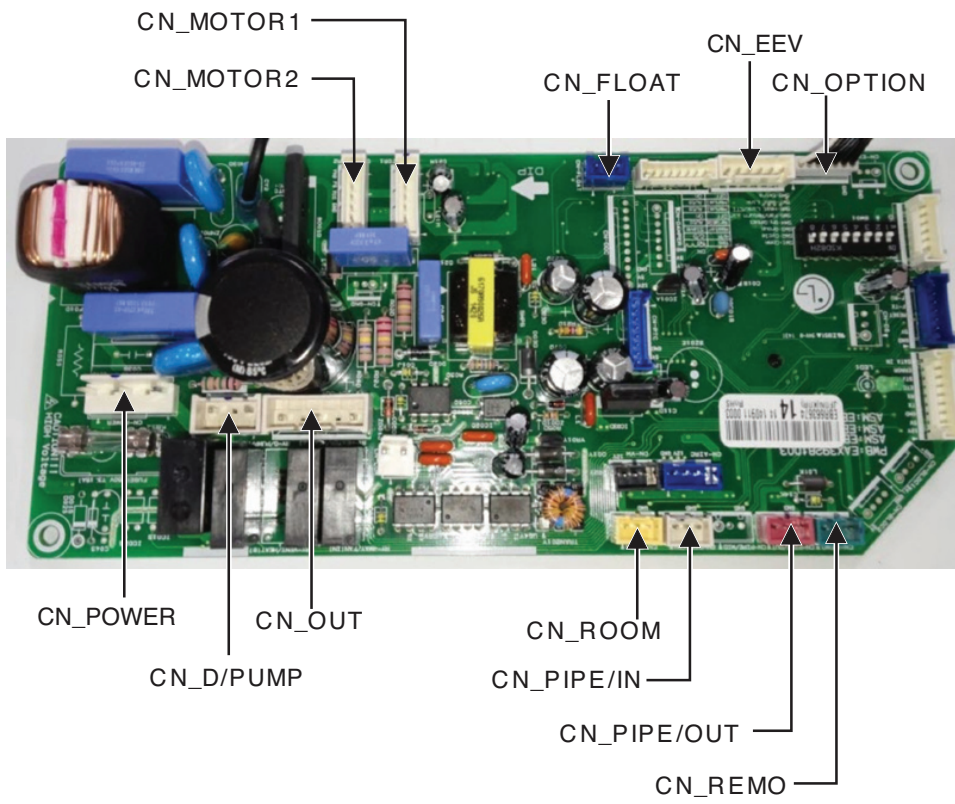

2. Exploded View

■ PRDCAM

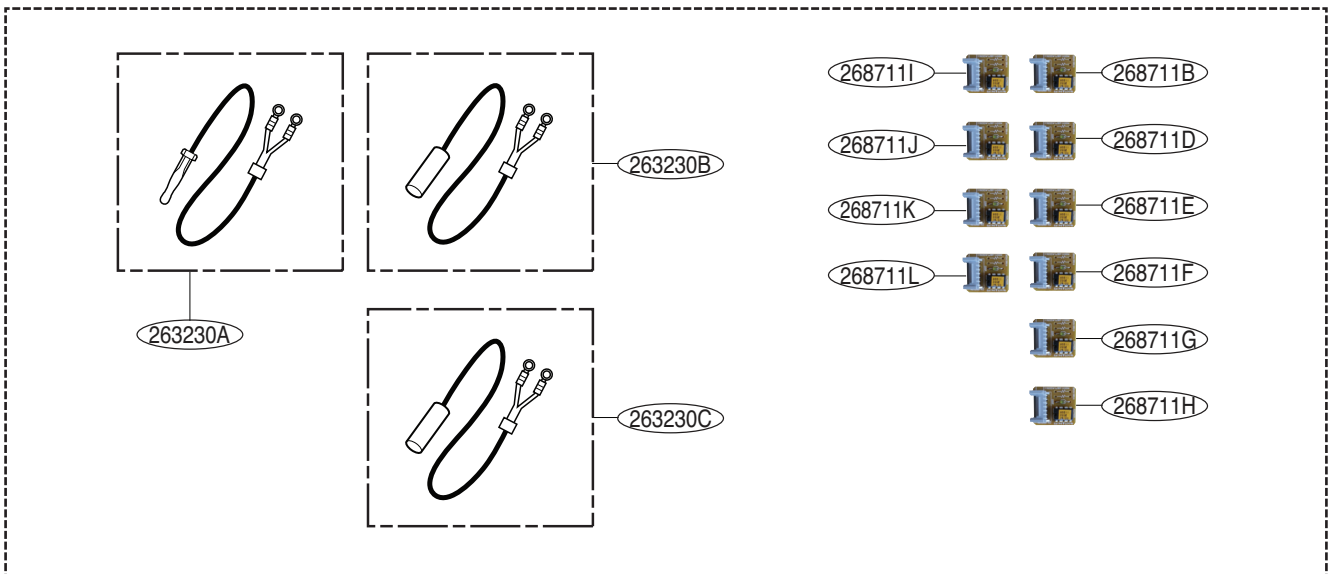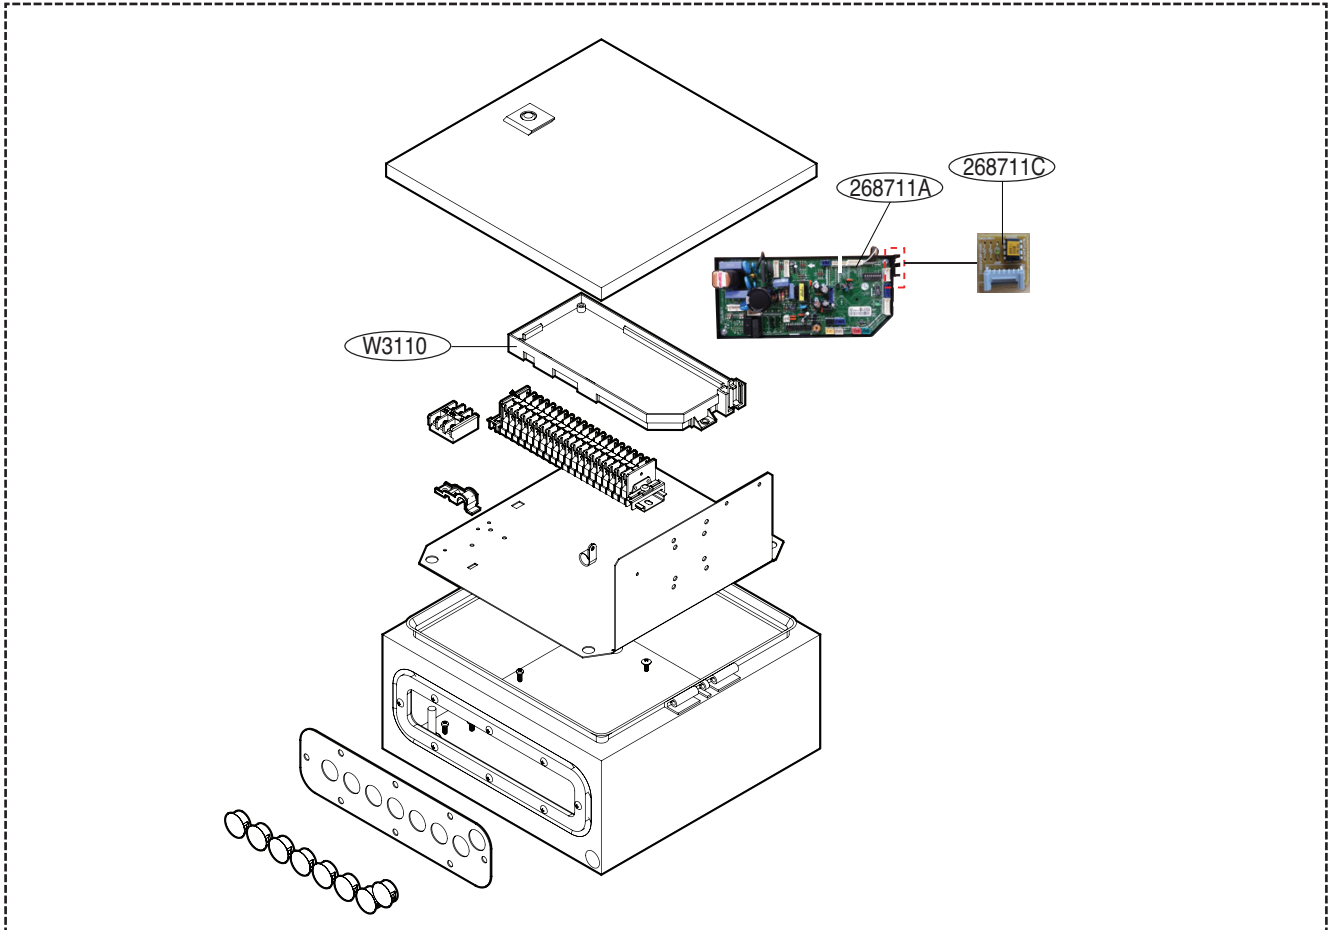

3. Replacement Parts List

■ PRCKAM

LOCATION NO	DESCRIPTION	PART NO	Q'TY
268711A	PCB Assembly,Main	EBR66367414	1
268711B	PCB Assembly,Option(28k)	EBR52358907	1
268711C	PCB Assembly,Option(36k)	EBR52358908	1
268711D	PCB Assembly,Option(42k)	EBR52358909	1
268711E	PCB Assembly,Option(48k)	EBR52358910	1
268711F	PCB Assembly,Option(76k)	EBR52358911	1
268711G	PCB Assembly,Option(96k)	EBR52358912	1
268711H	PCB Assembly,Option(192k)	EBR52358913	1
268711I	PCB Assembly,Option(115k)	EBR52358914	1
268711J	PCB Assembly,Option(134k)	EBR52358915	1
268711K	PCB Assembly,Option(153k)	EBR52358916	1
268711L	PCB Assembly,Option(172k)	EBR52358917	1
263230A	Thermistor Assembly(Room)	EBG61106821	1
263230B	Thermistor Assembly(Pipe-In)	EBG61287703	1
263230C	Thermistor Assembly(Pipe-Out)	EBG61287704	1
W3110	Case	3110A20145A	1



P/NO : MFL67103113

JANUARY, 2015